


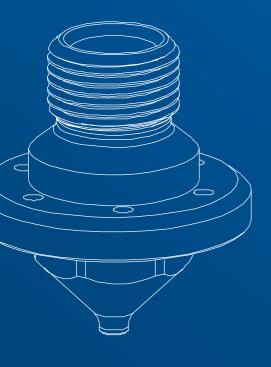


A16 series

mod. A16, A16 double entry

Spare parts and components



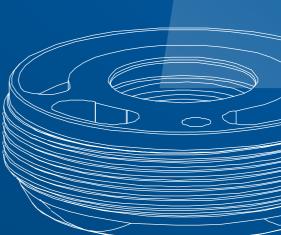




EN

SPARE PARTS

mod. A16 **DETAILS LIST**

- 1 [x1] Finger protection 2.0 [x1] 2-hole sleeve 2.1 [x1] 1-hole sleeve 3 [x1] Awl kit 4 [x1] Body group
- 4a [x1] Gasket 4b [x1] Gasket 5 [x1] Piston assembly 5a [x1] Gasket
- 5b [x1] Gasket 6 [x1] Needle stroke adjustment unit **7** [x1] Key

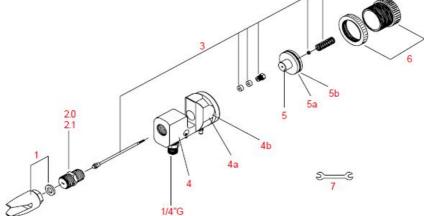




EN

SPARE PARTS

DETAILS LIST

mod. A16 double entry

- 1 [x1] Finger protection
- 2.0 [x1] 2-hole sleeve 2.1 [x1] 1-hole sleeve
- **3** [x1] Awl kit
- 4 [x1] Body group
- 4a [x1] Gasket
- 4b [x1] Gasket
- 5 [x1] Piston assembly
- 5a [x1] Gasket 5b [x1] Gasket
- 6 [x1] Needle stroke adjustment unit
- **7** [x1] Key

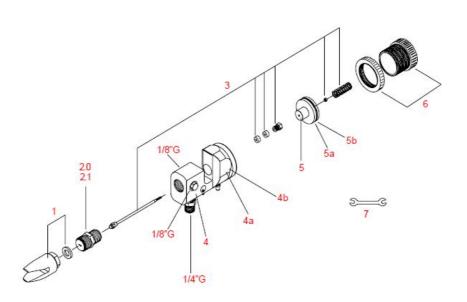



EN

DISPOSAL

If, for any reason, it is intended to put the painting unit out of service, it is necessary to observe some fundamental rules aimed at safeguarding the environment as per the provisions of the law currently in force.

Sheaths, flexible ducts, plastic or non-metallic material components must be disassembled and disposed of separately at the appropriate differentiated collection centres.

The machine DOES NOT CONTAIN POLLUTING OILS but the waste paints must in any case be disposed of at authorized consortia.

SUPPORT

DO YOU NEED HELP?

We are at your disposal.




+39 0124 5154 44



aircom@aircom.it



Online support

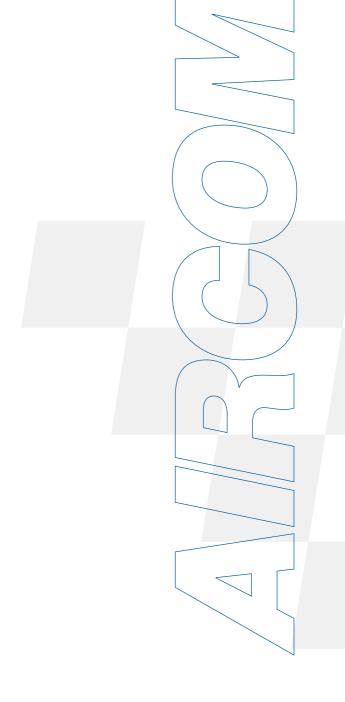



DISCOVER ALL PRODUCTS



Follow us









aircom.it