


# Instruction manual

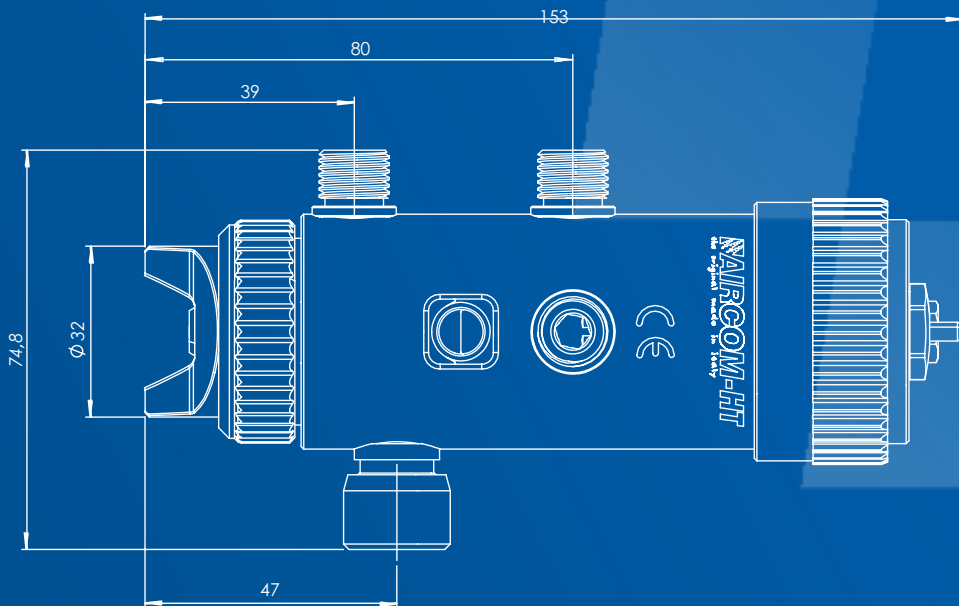

mod. HT, HT-X, HT-XC

## AVAILABLE MODELS

### **mod. HT**


Versatile gun with reduced weight and incumbrance Presence of optional washing circuit

### **mod. HT-X**

Stainless steel internal passages  
Presence of optional washing circuit

### **mod. HT-XC**

Stainless steel inner passages and spray head  
Presence of optional washing circuit

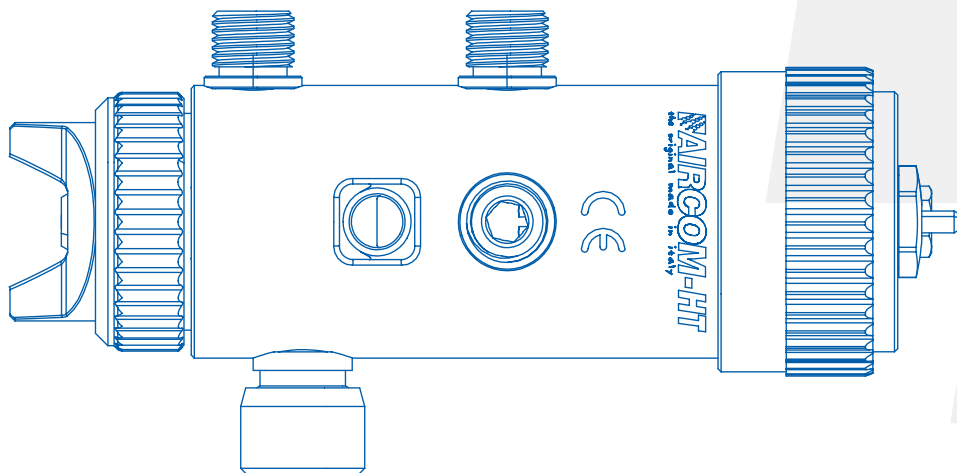

# Index

---

## *Instruction Manual*

<b>Warnings</b>	<b>.04</b>
<b>Maintenance and cleaning</b>	<b>.04</b>
<b>Installation and start-up</b>	<b>.05</b>
<b>Technical data</b>	<b>.08</b>
<b>Troubleshooting</b>	<b>.10</b>
<b>Spare parts and components</b>	<b>.11</b>
<b>Certified quality</b>	<b>.18</b>
<b>Support</b>	<b>.18</b>



### **WARNINGS!**

Carefully read and follow all instructions and safety precautions before using the product.



### **MANUALS**

Our manuals are available at [aircom.it/en/support/manuals/](https://aircom.it/en/support/manuals/)  
Or, by scanning the QR Code on this page.

## WARNINGS

---

### CORROSIVE PRODUCT WARNINGS

Our guns can be used with the majority of water, or solvent-based pigments for coating and finishing all types of surfaces. However, they are not designed to spray abrasive and/or corrosive products. If abrasive and/or corrosive products are used, guns with components made of the appropriate material can be ordered.

### HEALTH HAZARD

Some chemicals, once sprayed, may be harmful and cause irritation or health disorders. Careful reading of all labels and instructions on how to use the product are necessary. Use of the product is restricted to trained technical personnel, with the use of special safety glasses when adjusting the gun and, while the system is operating.

## MAINTENANCE AND CLEANING

---

### MAINTENANCE

Before any maintenance work, empty the gun and disconnect it from both, the compressed air supply, and the liquid supply. Use only original AIRCOM® accessories, spare parts, and related components: any other product not supplied by AIRCOM® is not approved or authorized. AIRCOM® is not liable for any damage caused by using non-original spare parts and accessories.

### CLEANING

Use exclusively appropriate liquid cleaners with neutral pH 6-8. Do not use acids, alkaline solutions or other cleaning agents containing sodium hydroxide, which are aggressive for cleaning the exterior of the gun. Do not immerse the gun in liquid cleaners that may cause corrosion of the product. Clean all material passages by propagating water within the paint circuit: inadequate cleaning can cause damages to the fan shape. While cleaning, avoid scratching the surfaces of the air nozzle holes and the dipstick.

# INSTALLATION

## TECHNICAL SPECIFICATIONS




**Connection hole diameter:** 10,5 mm.

### Size of pipe junctions:

- Control air inlet: **A** = ¼ gas
- Atomizing air inlet: **B** = ¼ gas
- Product inlet: **C** = ¼ gas

**Gun weight:** 0,79 kg

**Gun size:** see dimensioned views

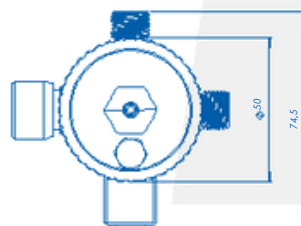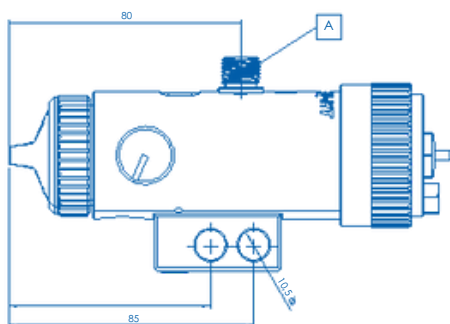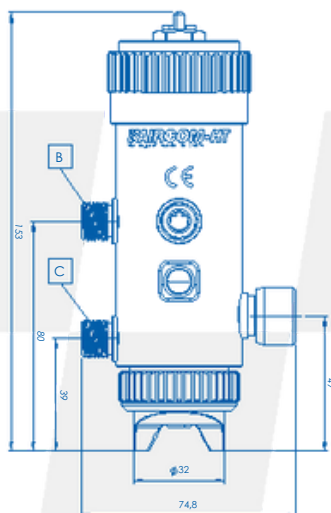

## VIDEO TUTORIALS ►

Our video tutorials are available at [aircom.it/en/support/tutorials/](https://aircom.it/en/support/tutorials/)  
Or, by scanning the QR Code on this page.



## INSTALLATION AND STARTUP

Before using a new gun or a new product, clean the gun thoroughly with an appropriate solvent. Powering should be done with dry, filtered air and regulated to constant pressure.

## DIRECTIONS FOR GUN OPERATION

### A


Pipe  $\varnothing$  ext. X  $\varnothing$  int. = 8 X 6  
Plunger opening  $\geq$  4.0 bar

### B

Pipe  $\varnothing$  ext. X  $\varnothing$  int. = 8 X 6  
Atomization: from 1,5 to 3,5 bar

### C

Pipe  $\varnothing$  ext. X  $\varnothing$  int. = 8 X 6  
Product inlet

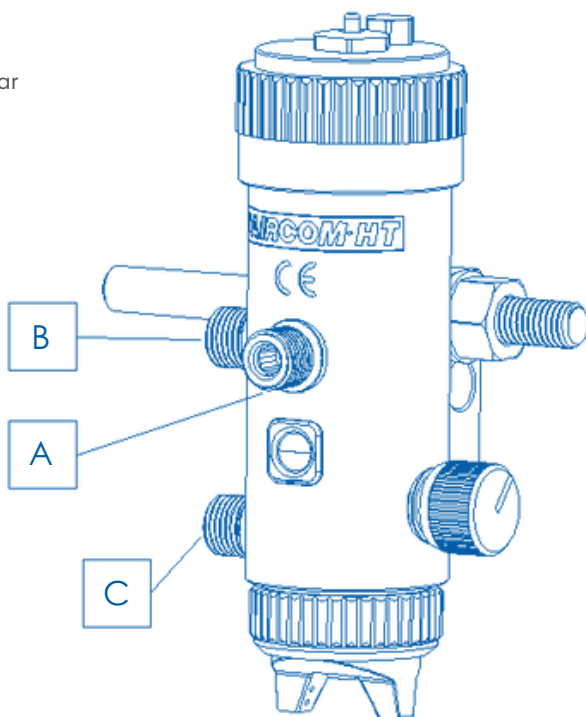

## ADJUSTMENT SEQUENCE


**1.** Lock the gun to the system using the fastening bracket and orient the head towards the appropriate coverage direction.

**2.** Connect the atomization air, control air and product piping to the junctions shown on the previous page.

**3.** Screw the handwheel part. [1090-G25] as far as it will go (do not force when reaching the stop). Act on the control air. If no drop of pigment comes out, remove the control air, and open the handwheel part. [1090-G25] with one click. Repeat the process until the first drop appears.

**4.** Open the handwheel part. [1090-G25] with the necessary clicks to determine the desired amount of pigment.

**5.** Act on the adjustment screw part. [1007-7] to obtain the desired atomization range.

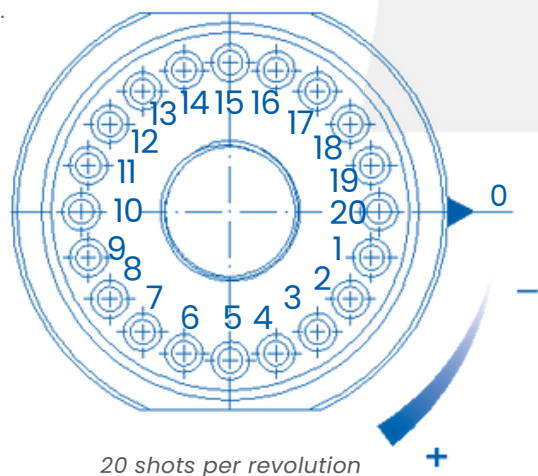

## TECHNICAL DATA

### HEAD 1007-30-KI

HEAD Ø NOZZLE	SHOTS	FLOW RATE OF THE FLUID (g/min)	ATOMIZATION PRESSURE (kg/cm <sup>2</sup> )	AIR CONSUMPTION (l/min)
1007-30-KI Ø 0,8	4	72	1,4	115
	6	117	1,65	129
1007-30-KI Ø 1,0	5	107	1,7	132
	7	160	2,0	148
1007-30-KI Ø 1,2	6	137	2,25	166
	8	197	2,65	190
1007-30-KI Ø 1,5	7	229	2,9	207
	10	311	3,3	230

#### NOTES

Pump pressure 0.8 to 1.0 Kg/cm<sup>2</sup>.  
Liquid used for testing: water. Ford cup viscosity 4 = 11 sec.



## TECHNICAL DATA





### HEAD 1007-30-WI

HEAD Ø NOZZLE	SHOTS	FLOW RATE OF THE FLUID (g/min)	ATOMIZATION PRESSURE (kg/cm <sup>2</sup> )	AIR CONSUMPTION (L/min)
1007-30-WI Ø 0,8	4	72	1,2	103
	6	117	1,5	122
1007-30-WI Ø 1,0	5	107	1,65	130
	7	160	1,8	140
1007-30-WI Ø 1,2	6	137	2,0	147
	8	197	2,35	168
1007-30-WI Ø 1,5	7	229	2,7	200
	10	311	3,0	217



#### NOTES

Pump pressure 0.8 to 1.0 Kg/cm<sup>2</sup>.  
Liquid used for testing: water. Ford cup viscosity 4 = 11 sec.

# TROUBLESHOOTING

Anomaly	Problem / Solution
<b>No atomization</b>	<b>No pressure is getting to the gun</b> <i>Check air system</i>
	<b>Valve part. [1007-43] worn out</b> <i>Replace valve part. [1007-43] worn out</i>
	<b>The head part. [1007-30], the nozzle part. [1007-2] and the needle part. [1121-1] are worn out.</b> <i>Replace the head part. [1007-30], nozzle part. [1007-2] and the needle part. [1121-1]</i>
	<b>The product is exceeding the amount needed</b> <i>Reduce the product passage</i>
	<b>Lack of product (flow rate too low)</b> <i>Add product or reduce atomization air pressure</i>
	<b>Missing product in tank or clogged pipes</b> <i>Fill tank or clean up with solvent</i>
<b>Leakage from the nozzle</b>	<b>Mounted handwheel part. [1090-G25] worn out</b> <i>Replace mounted handwheel part. [1090-G25] worn out</i>
<b>Air leakage from the adjustment screw</b>	<b>Gasket part. [B]</b> <i>Replace gasket part. [B]</i>
<b>Leakage of product from the vent</b>	<b>Gasket kit part. [1007-46 and 1090-48] worn out</b> <i>Replace gasket kit part. [1007-46 and 1090-48]</i>

# Spare parts and components

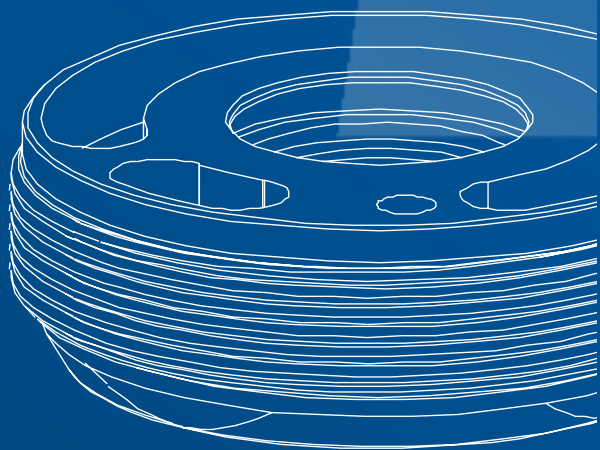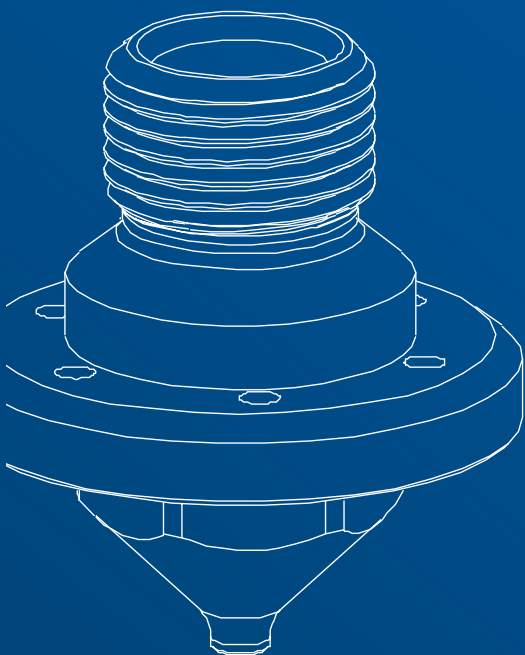


## SPARE PARTS

### DETAILS LIST

**mod. HT**

- 1007-2** [x1] Nozzle
- 1007-3** [x1] Ferrule
- 1007-7** [x2] Adjusting screw
- 1090-13** [x1] Cap
- 1007-30** [x1] Head
- 1121-1** [x1] Complete needle
- 1007-34** [x1] Gasket cover ring
- 1007-35** [x1] Valve
- 1090-11** [x1] Mounted plunger
- 37** [x1] Seeger
- 38** [x1] Gasket
- 39** [x1] Gasket
- 1090-12** [x1] Spring
- 1090-G25** [x1] Mounted hand wheel
- 1007-43** [x1] Mounted valve
- 1007-46** [x1] Gasket kit
- 1090-48** [x1] Gasket kit
- 1090-100** [x1] Plunger
- B** [x2] Gasket
- E** [x1] Gasket
- 1090-G18-X** [x1] Body with internal bushing in stainless steel, regulating valve, bracket block and cap
- L** [x2] Gasket
- N** [x2] Gasket
- 1007-R1** [x3] Junction

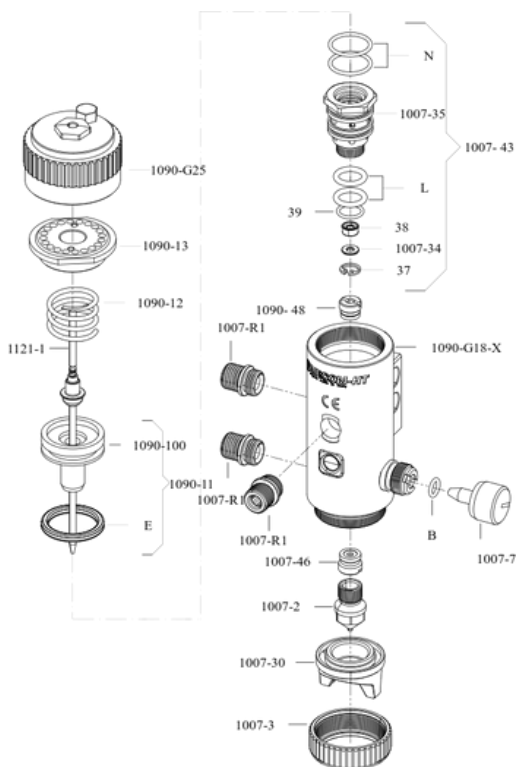

### NOTE


The head protection cap is also available as a spare part.  
 For the heads compatible with the model you can refer to the CNN table below.  
 The cap inserted by default in part. [1090-G18-X] can be replaced with a fitting for the washing circuit.

## SPARE PARTS

### DETAILS LIST

- 1007-2** [x1] Nozzle
- 1007-3** [x1] Ferrule
- 1007-7** [x2] Adjusting screw
- 1090-13** [x1] Cap
- 1007-30** [x1] Head
- 1121-1** [x1] Complete needle
- 1007-34** [x1] Gasket cover ring
- 1007-35** [x1] Valve
- 1090-11** [x1] Mounted plunger
- 37** [x1] Seeger
- 38** [x1] Gasket
- 39** [x1] Gasket
- 1090-12** [x1] Spring
- 1090-G25** [x1] Mounted hand wheel
- 1007-43** [x1] Mounted valve
- 1007-46-X** [x1] Stainless steel gasket kit
- 1090-48** [x1] Gasket kit
- 1090-100** [x1] Plunger
- B** [x2] Gasket
- E** [x1] Gasket
- 1090-G18-X** [x1] Body with internal bushing in stainless steel, regulating valve, bracket block and cap
- L** [x2] Gasket
- N** [x2] Gasket
- 1007-R1-X** [x3] Stainless steel junction

### mod. HT-X

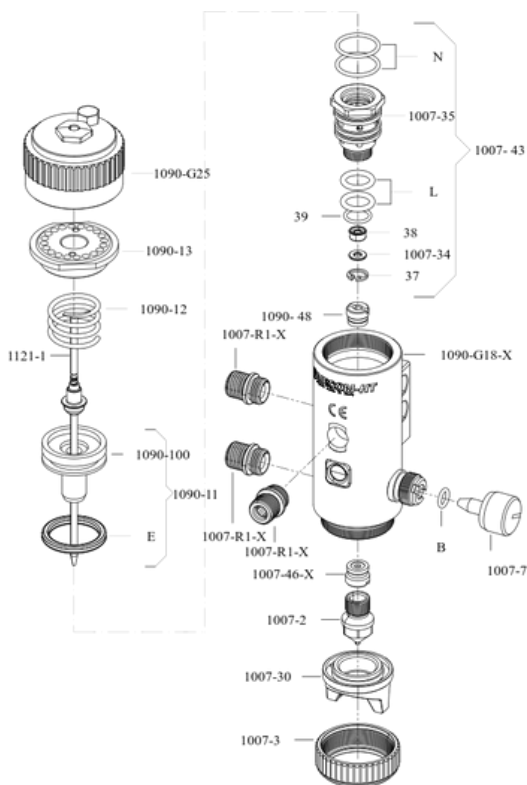

### NOTE


The head protection cap is also available as a spare part.  
 For the heads compatible with the model you can refer to the CNN table below.  
 The cap inserted by default in part. [1090-G18-X] can be replaced with a fitting for the washing circuit.

## SPARE PARTS

### DETAILS LIST

- 1007-2** [x1] Nozzle
- 1007-3** [x1] Ferrule
- 1007-7** [x2] Adjusting screw
- 1090-13** [x1] Cap
- 1007-30-X** [x1] Stainless steel head
- 1121-1** [x1] Complete needle
- 1007-34** [x1] Gasket cover ring
- 1007-35** [x1] Valve
- 1090-11** [x1] Mounted plunger
- 37** [x1] Seeger
- 38** [x1] Gasket
- 39** [x1] Gasket
- 1090-12** [x1] Spring
- 1090-G25** [x1] Mounted hand wheel
- 1007-43** [x1] Mounted valve
- 1007-46-X** [x1] Stainless steel gasket kit
- 1090-48** [x1] Gasket kit
- 1090-100** [x1] Plunger
- B** [x2] Gasket
- E** [x1] Gasket
- 1090-G18-X** [x1] Body with internal bushing in stainless steel, regulating valve, bracket block and cap
- L** [x2] Gasket
- N** [x2] Gasket
- 1007-R1-X** [x3] Stainless steel junction

### mod. HT-XC

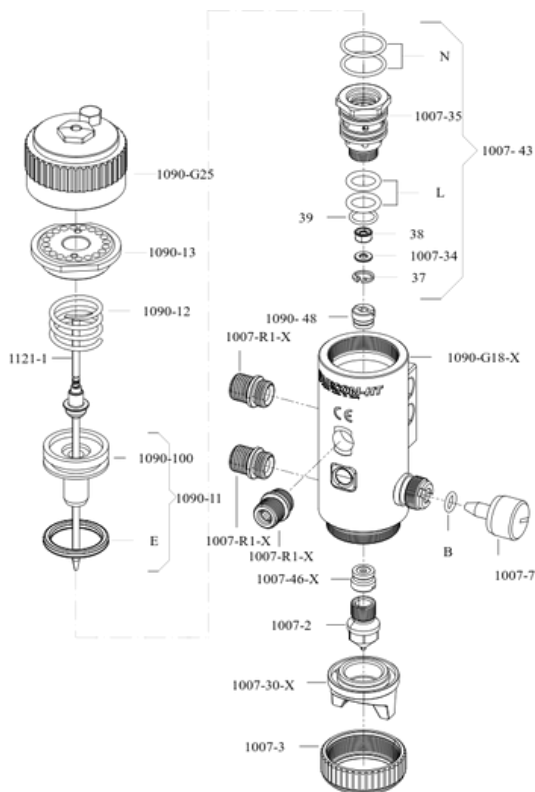

### NOTE

The head protection cap is also available as a spare part.  
 For the heads compatible with the model you can refer to the CNN table below.  
 The cap inserted by default in part. [1090-G18-X] can be replaced with a fitting for the washing circuit.

## COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT, HT-X**


1007-30-KI	CAP	NOZZLE	NEEDLE	
	1007-30-KI-0.8	1007-2-0.8	1121-1-0.8	
	1007-30-KI-1.0	1007-2-1.0	1121-1-1.0	
	1007-30-KI-1.2	1007-2-1.2	1121-1-1.2	
	1007-30-KI-1.5	1007-2-1.5	1121-1-1.5	
		1007-30-KI-1.8	1007-2-1.8	1121-1-1.8
		1007-30-KI-2.0	1007-2-2.0	1121-1-2.0
		1007-30-KI-2.2	1007-2-2.2	1121-1-2.2
		1007-30-KI-2.5	1007-2-2.5	1121-1-2.5
1007-30-KI-3.0	1007-2-3.0	1121-1-3.0		


1007-30-ZI	CAP	NOZZLE	NEEDLE	
	1007-30-ZI-0.8	1007-2-0.8	1121-1-0.8	
	1007-30-ZI-1.0	1007-2-1.0	1121-1-1.0	
	1007-30-ZI-1.2	1007-2-1.2	1121-1-1.2	
	1007-30-ZI-1.5	1007-2-1.5	1121-1-1.5	
		1007-30-ZI-1.8	1007-2-1.8	1121-1-1.8
		1007-30-ZI-2.0	1007-2-2.0	1121-1-2.0
		1007-30-ZI-2.2	1007-2-2.2	1121-1-2.2
		1007-30-ZI-2.5	1007-2-2.5	1121-1-2.5
1007-30-ZI-3.0	1007-2-3.0	1121-1-3.0		

## COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT, HT-X**

1007-30-NI	CAP	NOZZLE	NEEDLE
	1007-30-NI-0.8	1007-2-0.8	1121-1-0.8
	1007-30-NI-1.0	1007-2-1.0	1121-1-1.0
	1007-30-NI-1.2	1007-2-1.2	1121-1-1.2
	1007-30-NI-1.5	1007-2-1.5	1121-1-1.5
	1007-30-NI-1.8	1007-2-1.8	1121-1-1.8
	1007-30-NI-2.0	1007-2-2.0	1121-1-2.0
	1007-30-NI-2.2	1007-2-2.2	1121-1-2.2
	1007-30-NI-2.5	1007-2-2.5	1121-1-2.5
	1007-30-NI-3.0	1007-2-3.0	1121-1-3.0



1007-30-TI	CAP	NOZZLE	NEEDLE
	1007-30-TI-0.8	1007-2-0.8	1121-1-0.8
	1007-30-TI-1.0	1007-2-1.0	1121-1-1.0
	1007-30-TI-1.2	1007-2-1.2	1121-1-1.2
	1007-30-TI-1.5	1007-2-1.5	1121-1-1.5
	1007-30-TI-1.8	1007-2-1.8	1121-1-1.8
	1007-30-TI-2.0	1007-2-2.0	1121-1-2.0
	1007-30-TI-2.2	1007-2-2.2	1121-1-2.2
	1007-30-TI-2.5	1007-2-2.5	1121-1-2.5
	1007-30-TI-3.0	1007-2-3.0	1121-1-3.0





# COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT, HT-X**


1007-30-WI	CAP	NOZZLE	NEEDLE
 	1007-30-WI-0.8	1007-2-0.8	1121-1-0.8
	1007-30-WI-1.0	1007-2-1.0	1121-1-1.0
	1007-30-WI-1.2	1007-2-1.2	1121-1-1.2
	1007-30-WI-1.5	1007-2-1.5	1121-1-1.5
	1007-30-WI-1.8	1007-2-1.8	1121-1-1.8
	1007-30-WI-2.0	1007-2-2.0	1121-1-2.0
	1007-30-WI-2.2	1007-2-2.2	1121-1-2.2
	1007-30-WI-2.5	1007-2-2.5	1121-1-2.5
	1007-30-WI-3.0	1007-2-3.0	1121-1-3.0

 
1007-30-LE	CAP	NOZZLE	NEEDLE
 	1007-30-LE-0.8	1007-2-0.8	1121-1-0.8
	1007-30-LE-1.0	1007-2-1.0	1121-1-1.0
	1007-30-LE-1.2	1007-2-1.2	1121-1-1.2
	1007-30-LE-1.5	1007-2-1.5	1121-1-1.5
	1007-30-LE-1.8	1007-2-1.8	1121-1-1.8
	1007-30-LE-2.0	1007-2-2.0	1121-1-2.0
	1007-30-LE-2.2	1007-2-2.2	1121-1-2.2
	1007-30-LE-2.5	1007-2-2.5	1121-1-2.5
	1007-30-LE-3.0	1007-2-3.0	1121-1-3.0

## COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT, HT-X**



1007-30-SI	CAP	NOZZLE	NEEDLE
	1007-30-SI-0.8	1007-2-0.8	1121-1-0.8
	1007-30-SI-1.0	1007-2-1.0	1121-1-1.0
	1007-30-SI-1.2	1007-2-1.2	1121-1-1.2
	1007-30-SI-1.5	1007-2-1.5	1121-1-1.5



1007-30-SF	CAP	NOZZLE	NEEDLE
	1007-30-SF-0.8	1007-2-0.8	1121-1-0.8
	1007-30-SF-1.0	1007-2-1.0	1121-1-1.0
	1007-30-SF-1.2	1007-2-1.2	1121-1-1.2
	1007-30-SF-1.5	1007-2-1.5	1121-1-1.5
	1007-30-SF-1.8	1007-2-1.8	1121-1-1.8
	1007-30-SF-2.0	1007-2-2.0	1121-1-2.0
	1007-30-SF-2.2	1007-2-2.2	1121-1-2.2
	1007-30-SF-2.5	1007-2-2.5	1121-1-2.5
	1007-30-SF-3.0	1007-2-3.0	1121-1-3.0

# COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT-XC**


 
1007-30-KX	CAP	NOZZLE	NEEDLE
 	1007-30-KX-0.8	1007-2-0.8	1121-1-0.8
	1007-30-KX-1.0	1007-2-1.0	1121-1-1.0
	1007-30-KX-1.2	1007-2-1.2	1121-1-1.2
	1007-30-KX-1.5	1007-2-1.5	1121-1-1.5
	1007-30-KX-1.8	1007-2-1.8	1121-1-1.8
	1007-30-KX-2.0	1007-2-2.0	1121-1-2.0
	1007-30-KX-2.2	1007-2-2.2	1121-1-2.2
	1007-30-KX-2.5	1007-2-2.5	1121-1-2.5
	1007-30-KX-3.0	1007-2-3.0	1121-1-3.0

1007-30-ZX	CAP	NOZZLE	NEEDLE
 	1007-30-ZX-0.8	1007-2-0.8	1121-1-0.8
	1007-30-ZX-1.0	1007-2-1.0	1121-1-1.0
	1007-30-ZX-1.2	1007-2-1.2	1121-1-1.2
	1007-30-ZX-1.5	1007-2-1.5	1121-1-1.5
	1007-30-ZX-1.8	1007-2-1.8	1121-1-1.8
	1007-30-ZX-2.0	1007-2-2.0	1121-1-2.0
	1007-30-ZX-2.2	1007-2-2.2	1121-1-2.2
	1007-30-ZX-2.5	1007-2-2.5	1121-1-2.5
	1007-30-ZX-3.0	1007-2-3.0	1121-1-3.0

# COMPATIBLE CNN

Cap-Nozzle-Needle

**mod. HT-XC**

1007-30-SFX	CAP	NOZZLE	NEEDLE
	1007-30-SFX-0.8	1007-2-0.8	1121-1-0.8
	1007-30-SFX-1.0	1007-2-1.0	1121-1-1.0
	1007-30-SFX-1.2	1007-2-1.2	1121-1-1.2
	1007-30-SFX-1.5	1007-2-1.5	1121-1-1.5
	1007-30-SFX-1.8	1007-2-1.8	1121-1-1.8
	1007-30-SFX-2.0	1007-2-2.0	1121-1-2.0
	1007-30-SFX-2.2	1007-2-2.2	1121-1-2.2
	1007-30-SFX-2.5	1007-2-2.5	1121-1-2.5
	1007-30-SFX-3.0	1007-2-3.0	1121-1-3.0

## CERTIFIED QUALITY

### CERTIFICATIONS

All AIRCOM® products are certified according to norm EN 13 966 - 1 (VDMA-Einheitsblatt 24 366) and therefore also according to transfer efficiency parameters.



### THREE-COLOR INSERT

Each gun is marked with a three-color three-dimensional seal. It represents an additional guarantee of authenticity and Italianity because it is present exclusively in original AIRCOM® guns.



## SUPPORT

### DO YOU NEED HELP?

We are at your disposal.



+39 0124 5154 44



[aircom@aircom.it](mailto:aircom@aircom.it)



Online support

AIRCOM



DISCOVER ALL PRODUCTS



Follow us



[aircom.it](http://aircom.it)